


Conn.	Function	Gen
CN1	ECU	F
CN2	Crank pickup	F
CN3	Throttle Position Sensor	F
CN4	Coolant Temp Sensor	F
CN5	Air Temp Sensor	F
CN6	Right Injector	F
CN7	Left Injector	F
CN8	Ignition Coil	F
CN9	Cam Sensor	F
CN10	Diagnostics	M
CN11	Generator	M
CN12	Start Button	M
CN13	Kill Button	F
CN14	Voltage Regulator	F
CN15	Starter Solenoid	F
CN16	Fuel Pump	M
CN17	VBatt+	M/F

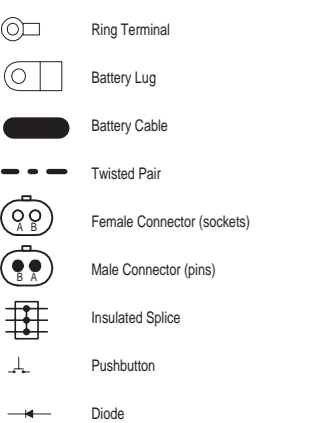

Wire#	Color	Category	Function
1-19	Black	Ground	Electrical grounds
20-29	Red	VBATT	+12V from battery
30-39	Orange	VCOIL	+12V from ignition circuit
40-44	Violet	KILL	Kill switch related circuits
45-49	Brown	START	Starter switch related circuits
50-59	Green	SENSGND	Sensor ground
60-69	Grey	SENSOR	Sensor inputs to ECU
70-79	White	SENS5V	+5V Power to sensors
80-89	Blue	OUTPUT	Ctrl lines to injectors and coil
90-99	Y/G/Y/BL	MISC	CAN, EUF, Power on, miscellaneous